

# USER GUIDE

UK

# CORDLESS TELEPHONE

 
Voxtel D200/D205




# AEG

perfekt in form und funktion


P1

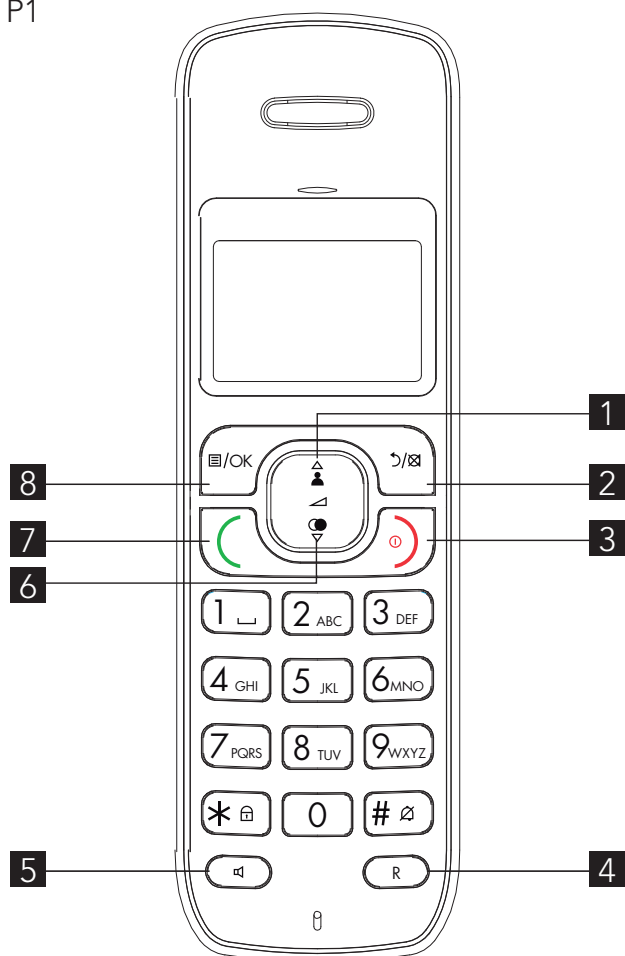


P2

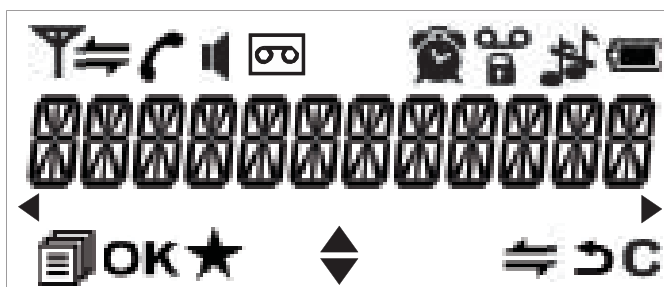 


P3

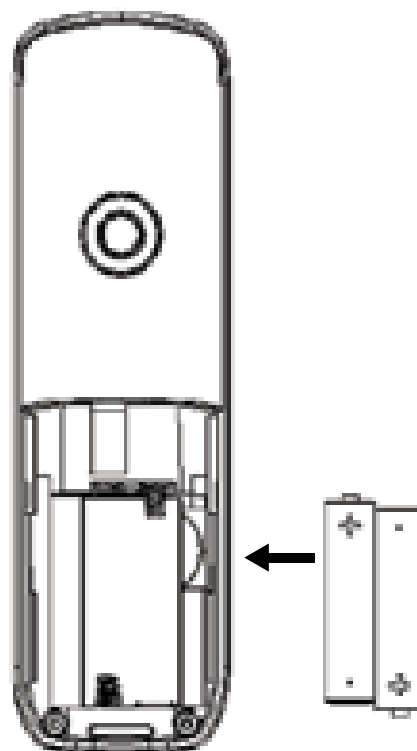 

P4

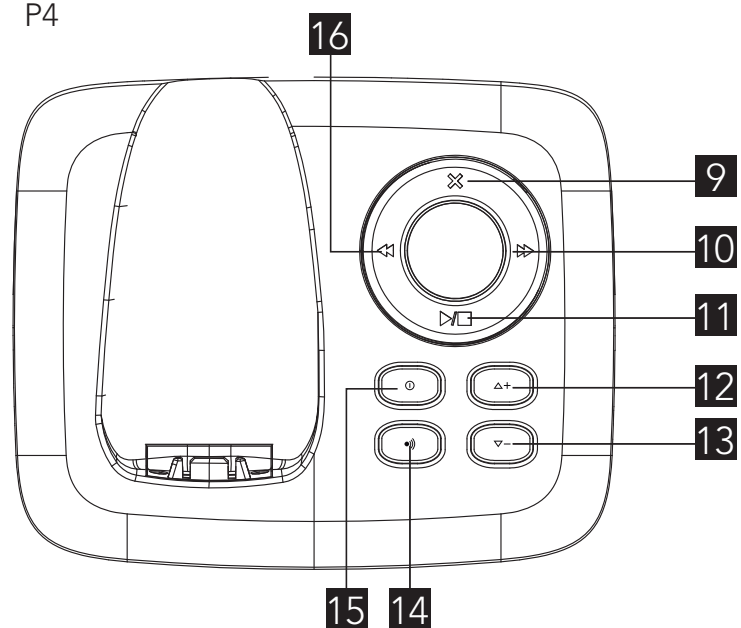 

P5

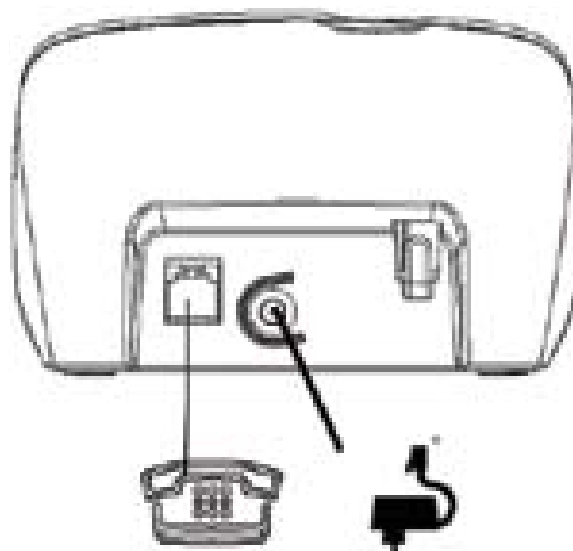 

## 1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper.

A full and detailed user guide with all the features described can be found on our website **[www.aegtelephones.eu](http://www.aegtelephones.eu)** . Please download the full user guide in case you want to make use of all the advanced features of your product. To save the environment we ask you not to print this full user guide. Thank you for supporting us to protect our environment.

## 2 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug the power adapter from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Keep your phone away from hot, humid conditions or strong sunlight and don't let it get wet or use this product near water (for example, near a bath tub , kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet under the following conditions:
  - When the power supply cord or plug is damaged.
  - If the product does not operate normally by following the operating instructions.
  - If the product has been dropped and the cabinet has been damaged.
  - If the product exhibits a distinct change in performance.
7. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries!

10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. Damage may be caused to the batteries.
12. Please ensure the batteries are inserted in the correct polarity.
13. Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

### 3 INTENDED USE

This telephone is intended to be connected to a public analogue telephone network or to an analogue extension of an approved compatible PBX system.

### 4 UNPACKING YOUR PHONE


 


In the box you will find:





- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 Rechargeable batteries
- 1 User manual

Keep the packing materials in a safe place in case you later need to transport the device.

## 5 GETTING TO KNOW YOUR PHONE




### 5.1 Handset overview (see P1)















#		Meaning
1		<b>Up key</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the call list</li> <li>• In menu mode: press to scroll up the menu items</li> <li>• In phonebook list / redial list / call list: press to scroll up the list</li> <li>• During a call: press to increase the earpiece volume</li> <li>• During ringing: press to increase the ringer volume</li> </ul>
2		<b>Right soft key (clear/back/mute/intercom)</b> <ul style="list-style-type: none"> <li>• In main menu mode: press to go back to idle screen</li> <li>• In sub-menu mode: press to go back to previous level</li> <li>• In sub-menu mode: press and hold to go back to idle screen</li> <li>• In editing / predialling mode: press to clear a character/digit</li> <li>• In editing / predialling mode: press and hold to delete all the characters / digits</li> <li>• During a call: press to mute / unmute the microphone</li> <li>• In idle mode: press to intercom another handset</li> </ul>
3		<b>Off / hang up key</b> <ul style="list-style-type: none"> <li>• During a call: press to end a call and go back to idle screen</li> <li>• In menu / editing mode: press to go back to previous menu</li> <li>• In idle mode: press and hold to power off the handset</li> <li>• In idle mode (when the handset is powered off): press and hold to power on the handset</li> </ul>
4		<b>Recall/flash key</b> <ul style="list-style-type: none"> <li>• In idle / predialling mode: press to insert a recall / flash</li> <li>• During a call: press to generate flash / recall signal</li> </ul>



5		<b>Speakerphone key</b> <ul style="list-style-type: none"> <li>• During a call: press to turn on / off the speakerphone.</li> <li>• Call list / phonebook entry: press to make a call with speakerphone</li> <li>• During ringing: press to answer a call with speakerphone</li> </ul>
6		<b>Down key (redial/down)</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the redial list</li> <li>• In menu mode: press to scroll down the menu items</li> <li>• In phonebook list / redial list / call list: press to scroll down the list</li> <li>• During a call: press to decrease the earpiece volume</li> <li>• During ringing: press to decrease the ringer volume</li> </ul>
7		<b>Talk key</b> <ul style="list-style-type: none"> <li>• In idle / predialling mode: press to make a call</li> <li>• In redial list / call list / phonebook list: press to make a call to the displayed entry</li> <li>• During ringing: Press to answer a call</li> </ul>
8		<b>Left soft key (menu/ok)</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the main menu</li> <li>• In sub-menu mode: press to confirm the selection</li> <li>• During a call: press to access Intercom/phonebook/ redial list/ call list</li> </ul>

## 5.2 Display icons and symbols (see P2)









The LCD display gives you information on the current status of the telephone.

	Meaning
	Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
	Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
	Indicates a call is in progress on that handset.

	Indicates that speakerphone is being used.
	Indicates that your answering machine (TAM) is on and flashes when there is a new message.
	Indicates that the handset ringer is switched off.
	Steady when an alarm is set. Flashes when the alarm is sounding.
	Indicates that the keypad is locked.
	Indicates when you have a new Voice Mail message. (This is a caller display service from the network operator.)
	Indicates when the battery is fully charged. Whole icon flashes when the battery is charging. Internal block icon flashes when the battery is in final charging stage.
	Indicates when the battery needs charging. Flashes when low battery power level is detected.
	Indicates when there are more characters or numbers in front of those being displayed.
	Indicates when there are more characters or numbers after those being displayed.
	Left soft key function. Press to access the main menu.
<b>OK</b>	Left soft key function. Press to confirm the current selection.
	Indicates new TAM message / new call in TAM message list / call list.
	Indicates more options available in lists, above or below.
	Right soft key function. Press to start an intercom call.

	Right soft key function. Press to go back to the previous menu (back) level or cancel the current action.
	Right soft key function. Press the alarm, or mute/unmute the microphone during a call.

### 5.3 Base station with telephone answering machine (TAM) control (see P4)





#		Meaning
9		<b>Delete</b> Press once to delete the message during playback. In idle mode, press and hold to delete all the old messages.
10		<b>Skip forward</b> Press to skip the current message and play the next message.
11		<b>Play/stop</b> Press to play messages. Press to stop the message playback.
12		Press to increase the playback volume.
13		Press to decrease the playback volume.
14		<b>Find</b> Press to page your registered handset(s). Press and hold to start the registration process.
15		<b>TAM on/off</b> Press to turn on the answering machine. Press again to turn off the answering machine.
16		<b>Skip backward</b> Press to repeat playing the current message from the beginning. Press twice to skip back to the previous message.









 



## 5.4 Base two digit-LED display information

<b>0F-&gt; --</b>	Displayed when the answering machine is turned off.
<b>0n-&gt; XX</b>	Displayed when the answering machine is turned on where XX is number of messages in TAM memory.
<b>00</b>	Steady on: no voice messages in the TAM.
<b>XX</b>	Flashing: there are XX new messages recorded where XX is from 01 to 59.
<b>ZZ</b>	Steady on: there are ZZ old messages in the TAM memory and no new messages.
<b>XX/FF</b>	Flashing XX alternately with FF: there are XX new voice messages recorded and the TAM memory is full.
<b>FF</b>	Flashing FF: the TAM memory is full and there are no new messages.
<b>-- /XX</b>	Flashing XX alternately with --: the time / date is not set and there are XX new messages recorded.
<b>--</b>	Flashing --: the time / date is not set and there are no new messages recorded.
<b>XX</b>	XX steady on: playing the current XX old recorded message. XX flashing: playing the current XX new recorded incoming message.
<b>A1/A2</b>	Steady on: playing the current outgoing message (OGM) where A1 is the answer & record OGM and A2 is the answer only OGM.
<b>XX/An</b>	Flashing XX alternately with An: currently recording the new XX incoming message.
<b>rA</b>	Flashing: remote access is in progress from a handset or via the external line.
<b>LX</b>	Steady on: indicates the current volume level where X is from 1 to 8.

## 5.5 Menu structure

- In idle mode, press  to go to CALL LIST, the first option in the menu list.
- Press  to go to other options in the menu list.
- Press  to enter a sub-menu or function.
- Press  to go back to the previous level
- Refer to the following for the menu structure.

							
Key press							
Main Menu	CALL LIST	PHONE-BOOK	BS SETTINGS	HS SETTINGS	REGISTRATION	DEFAULT	ANS. MACHINE
Sub-menu	Shows "EMPTY" or the first Call List Entry. Then  for: - ADD TO PB - DELETE - DELETE ALL - DETAILS	Shows "EMPTY" or the first phonebook Entry. Then  for: - ADD PB STATUS or - ADD - VIEW - EDIT - DELETE - DELETE ALL - PB STATUS	- BS RINGER - RING VOLUME - DELETE HS - FLASH TIME - CHANGE PIN	- ALARM - RING SETUP - TONE SETUP - LANGUAGE - RENAME HS - HS DISPLAY - AUTO ANSWER - DATE & TIME	PIN? ----	PIN? ----	- MSG PLAYBACK - DELETE ALL MEMO - TAM ON/OFF - TAM SETTINGS - ANSWER MODE - TAM LANGUAGE - OGM SETTINGS - ANSWER DELAY - RECORD TIME - REMOTE ACC - COMPRESSION - BS SCREENING - CHANGE PIN

## 5.6 Text and Digit Entry

The following tables show you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

**Writing Tips:**

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text with the  $\Delta/\nabla$  keys to amend the text entry.
- Press  $\rightarrow$  to delete the last character.
- Press and hold  $\rightarrow$  to delete the entire text string.

**5.6.1 English Character Set**

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, or P (if press and hold)
*	*	?	/	\	(	)					*
#	°	'	,	-	&						

**6 INSTALLATION****6.1 Connecting the base station (see p5)**

- Plug the power supply and line cord into the base station.
- Plug the power adapter into a 230 V ac/50Hz mains socket and the line cord into your telephone line socket.

**Warning:**

Use only the provided adaptor, using other power supplies may cause a hazard or damage the phone.

Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket to unplug in case needed. Never try to lengthen the mains power cable.


**Note:**

The base unit needs mains power for normal operation, not just for charging the handset batteries.

**6.2 Installing and charging the batteries (see P3)**

- Place the 2 supplied batteries into the battery compartment with the polarity markings. Use only the NiMH rechargeable battery type provided with the telephone.
- Position the battery compartment cover over the batteries and slide up to click into place.
- Put the handset on the base and charge for 15 hours before using the handset for the first time.
  - > The handset will give a beep when it is properly placed on the base or charger.






**7 TELEPHONE OPERATION****7.1 Make a call****7.1.1 Preparatory dialling**

- Enter the phone number and press  to connect to the line and dial the number.
  - > When entering the number, if you make a mistake, press **C** to delete digits.

**7.1.2 Direct dialling**

- Press  to connect to the line and then enter the phone number.




**7.1.3 Call from the phonebook**

- Press , , **OK** to access the phonebook and press / to select the desired phonebook entry.
- Press  to dial out the selected phonebook entry.

**Note:**





The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

**7.1.4 Call from the call list (only available with caller display)**

- Press  to access the call list and press / to select the desired call list entry.

- Press  to dial out the selected call list entry.

### 7.1.5 Call from the redial list

- Press  to access the redial list and press / to select the desired redial number.
- Press  to dial out the selected redial number.

### 7.1.6 Call timer

Your handset automatically times the duration of every call.

The call timer is displayed as soon as you answer a call or 15 seconds after dialling and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

## 7.2 Answer a call

If the handset is not on the charging cradle:

- When the phone rings, press  to answer a call.

### Note:

If "AUTO ANSWER" is set to "ON", then lifting the handset off the base or charger will answer the call automatically and no keys need to be pressed.

## 7.3 End a call

- During a call press  to end the call.

### OR

- Put the handset on the base station or charger to end the call.



## 7.4 Handset speakerphone

During a call, you can press  to alternate between hands-free speakerphone and normal handset use.

## 7.5 Adjust volume

There are 5 levels ("VOLUME 1" to "VOLUME 5") to choose from for each of the earpiece and speaker volumes.

During a call:


- Press / to select volume 1-5. The current setting is shown.  
>When you end the call, the setting will remain at the last selected level.

## 7.6 Mute a call


You can talk to someone nearby without letting the caller hear you during a call.

During a call:

Press "C" (  ) to mute the microphone and "MUTED" will display on the LCD.

Your caller cannot hear you. Press "C" (  ) again to unmute the microphone.

## 7.7 Turn off the handset ringer

In idle, press and hold # to turn off the handset ringer. The  icon is displayed on the LCD.


### Note:

The display will still flash the call icon  and show "CALL" or the caller display number, when there is an incoming call, even if the ringer is turned off.

To turn the ringer back on, press and hold # again.

## 7.8 Turn on the keypad lock

You can lock the keypad so that it cannot be used accidentally while carrying it around.

- In idle, press and hold \* to turn on the keypad lock and the  icon will display.

### Note:

You can still use  to answer a call when the handset is ringing.

To turn the keypad lock off, press and hold \* again.

## 7.9 Redial the last number



You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

### 7.9.1 Redial a number from the redial list

- In idle mode, press  to access the redial list.

### Note:

If the redial list entry shows a name, press # to view the number of this entry.

- Press  to browse the redial list.
- Press  to dial to the selected redial number.

**Note:**

If there are no numbers in the redial list, the display shows "EMPTY".

**7.9.2 Store a redial number into the phonebook**

- Follow Steps 1 and 2 in section 7.9.1.
- Press **OK** and **△/▽** to select "ADD TO PB".
- Press **OK** and then enter the name you want to use in the phonebook.
- Press **OK** and then modify the number, if necessary.
- Press **OK** to show "MELODY 1".
- Press **△/▽** to browse the ringtone list. The respective ringtone will be played when browsing the ringtone list.

**Note**

The selected melody will only be played when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.

- Press **OK** to confirm, and the entry will be stored.

**7.9.3 Delete a redial number**

- Follow Steps 1 and 2 in section 7.9.1.
- Press **OK** and **△/▽** to select "DELETE".
- Press **OK** to confirm, and the entry will be deleted.

**7.9.4 Delete all redial list entries**

- Follow Steps 1 and 2 in section 7.9.1.
- Press **OK** and **△/▽** to select "DELETE ALL".
- Press **OK** to display "CONFIRM?".
- Press **OK** to confirm. All entries will be deleted and the display will show "EMPTY".

**7.10 Find the handset**

You can locate the handset by pressing the find key **14**. All the handsets registered to the base will produce the paging tone and show "PAGING" on the display for 60 seconds.

You can stop the paging by pressing  on any handset or  on the base again.

**Note:**

If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

## 7.11 Make an Internal Call (Multi - handset versions only)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

### Note:

If only one handset is registered to the base station, when **↵/☒** is pressed, it will display "NOT POSSIBLE".

### 7.11.1 Intercom another handset

- In idle mode, press "C" ( **↵/☒** ) and all the other registered handset numbers will display, along with a "9".
- Enter the number of the handset that you want to call or enter "9" to call all handsets.
- The called handset rings and **⏏** must be pressed on that handset to establish the intercom call.

### Note:

If only two handsets are registered to the base station, pressing "C" ( **↵/☒** ) will call the other handset immediately.

### Note:

If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

### 7.11.2 Call all handsets


- In idle mode, press **↵/☒** and the registered handsets will display.
- Press the "9" key to ring to all registered handsets.

### 7.11.3 Transfer an external call to another handset


During an external call:

- Press **☐** to select "INTERCOM".
- Press **OK** to show all the other registered handset numbers, plus "9". Enter the number for the handset you want to transfer the call to.
- The external call is put on hold automatically and the called handset rings.
- Press **⏏** on the called handset to establish an internal call.



- Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
- The external call is transferred to the called handset.

### Note:

If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing .


## 7.11.4 Make a 3-way conference call

The conference call feature allows one external call to be shared with two handsets (in intercom).

The three parties can share the conversation and no additional network subscription is required.

During an external call:

- Follow Steps 1 to 4 in section 7.11.3.
- Press and hold the star key \* on the calling handset to establish the conference call.




Either handset can exit the conference by pressing , leaving the other handset still connected to the external call.

## 8 PRIVATE PHONEBOOK

Each handset can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note: the different ringtones only play when you receive a call if you subscribe to caller display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.

### 8.1 Add a new phonebook entry

In idle:

- Press  and  to select "PHONEBOOK" and then press OK to access the phonebook.
- Press OK to show "ADD".
- Press OK and then enter the name.
- Press OK and then enter the number.
- Press OK and  to select the desired ringtone for your phonebook entry.

- Press **OK** to store the phonebook entry.

## 8.2 Search for a phonebook entry

In idle:

- Press **☰** and **▲/▼** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times) and then **▲/▼** to scroll to the entry you want.

## 8.3 View a Phonebook Entry

In idle:

- Press **☰** and **▲/▼** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Press **▲/▼** to select the desired phonebook entry.
- Press **OK** and **▲/▼** to select "VIEW".
- Press **OK** and **▲/▼** to review the name, number and ringtone of the selected phonebook entry.

### Note:

If the number is more than 12 digits, press **☰/OK** or **↶/✕** to view the remaining digits.

## 8.4 Edit a phonebook entry

In idle:

- Press **☰** and **▲/▼** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Press **▲/▼** to select the desired phonebook entry.
- Press **OK** and **▲/▼** to select "EDIT".
- Press **OK** to display the current name.
- Edit the name and press **OK**.
- Edit the number and press **OK**.
- Press **▲/▼** to select the ringtone and press **OK** to confirm.

## 8.5 Delete a phonebook entry

In idle:

- Press **☰** and **▲/▼** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Press **▲/▼** to select the desired phonebook entry.
- Press **OK** and **▲/▼** to select "DELETE".

- Press **OK** to confirm, and the entry will be deleted.

## 8.6 Delete all Phonebook entries

- Press **☰** and **△/▽** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Press **OK** and **△/▽** to select "DELETE ALL".
- Press **OK** to display "CONFIRM?".
- Press **OK** to confirm. All entries will be deleted and the display will show "EMPTY".

## 8.7 Check the Phonebook Usage

You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook.

- Press **☰** and **△/▽** to select "PHONEBOOK" and then press **OK** to access the phonebook.
- Press **OK** and **△/▽** to select "PB STATUS".
- Press **OK** to display how much of the phonebook is being used, for example "14/20 USED" means 14 entries are stored out of the total 20 available spaces.

# 9 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the calling Line Identification service with your network service provider. Your phone can store up to 20 received calls with date/time information in the call list. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your private phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.



If the call is from someone who withheld their number, "WITHHELD" will display.




If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, "OUT OF AREA" will display. If you've got new caller display records, the handset will display "X NEW CALLS" in standby mode. The New calls indication will remain until all the new call records have been viewed on that handset.

## 9.1 View the call list



All received calls are saved in the call list with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a ★ icon at the centre of the bottom line of the display.

- Press  to access the call list.



**OR** Press  and  to show "CALL LIST", then press **OK**.

- Press  to select the desired entry.
- Press **#** to view the caller's number if applicable.
- Press ,  to show "DETAILS", and then **OK** to display the date and time of the call.
- Press **OK** to go back to the previous screen.

## 9.2 Store a call list number into the phonebook

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and  to show "ADD TO PB".
- Press **OK** and then enter the name.
- Press **OK** and the selected call list number is displayed.
- Edit the number if necessary.
- Press **OK** and  to select the ringtone.
- Press **OK** to store the phonebook entry and return to the calls list.

## 9.3 Delete an entry in the call list

- Follow steps 1 and 2 in section "9.1 View the call list" on page 20.
- Press  and  to select "DELETE".
- Press **OK** to confirm.

## 9.4 Delete all call list entries

Follow steps 1 and 2 in section "9.1 View the call list" on page 20.

- Press  and  to select "DELETE ALL".
- Press **OK** to display "CONFIRM?".
- Press **OK** to confirm.

> All entries will be deleted and the display will show "EMPTY".










## 10 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.










### 10.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call. The Caller Display service only sends the month and date, not the year, so you may need to set the year.









#### 10.1.1 Change the Date Format

- Press  and  to select "HS SETTINGS".
- Press  and  to select "DATE & TIME".
- Press  and  to select "DATE FORMAT".
- Press  and  to select your desired date format (DD-MM-YY or MM-DD-YY).
- Press  to confirm.

#### 10.1.2 Change the Time Format

- Press  and  to select "HS SETTINGS".
- Press  and  to select "DATE & TIME".
- Press  and  to select "TIME FORMAT".
- Press  and  to select your desired time format (12 HR or 24 HR).
- Press  to confirm.

#### 10.1.3 Set the Time

- Press  and  to select "HS SETTINGS".
- Press  and  to select "DATE & TIME".
- Press  and  to select "SET TIME".
- Press  and then enter the time information in 24 hour format.
- Press  to confirm.

#### Note:

If time has been set before, the current time will display, otherwise, "HH:MM" will display.

#### 10.1.4 Set the Date



- Press  and  to select "HS SETTINGS".
- Press  and  to select "DATE & TIME".
- Press  and  to select "SET DATE".


- Press **OK** and then enter the date information in the format you set in Section 10.1.1.
- Press **OK** to confirm.

**Note:**



If date has been set before, the current date will display, otherwise, "DD-MM-YY " will display.

## 10.2 Alarm Settings


You can set an alarm time on this phone. When an alarm is set, the alarm icon  is shown on the handset display. When the alarm time is reached, the alarm icon  and "ALARM ON" flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm.

If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold  while the alarm is sounding, to stop the alarm and turn off the snooze function.

**Note:**

- > A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- > The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to "VOLUME OFF", the alarm still sounds at VOLUME 1 level.
- > During an external call or internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds  to disable the alarm, the display will revert to the call duration.
- > During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

### 10.2.1 Turn on/off the Alarm

- Press  and  to select "HS SETTINGS".
- Press **OK** to show "ALARM".
- Press **OK** and  to select "ON"/"OFF".
- Press **OK** to confirm.

**Note:**

If ON is selected, you will be prompted to set the alarm time.

**10.2.2 Set the Alarm Time (If Alarm time is set to be "ON")**

- Follow Steps 1 to 4 in Section 10.2.1.
- Enter the alarm time in 24 hour format.
- Press **OK** to display "SNOOZE".
- Press **OK** and **△/▽** to select snooze "ON" or "OFF".
- Press **OK** to confirm.

**10.3 Handset Settings****10.3.1 Set the Ringer Melody for Internal Calls**

- Press **≡** and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "RING SETUP".
- Press **OK** to show "INT RING".
- Press **OK** and **△/▽** to select the melody you want to hear for internal calls.

**Note:**

The respective melody will be played while browsing the ringtone list.

- Press **OK** to confirm.

**10.3.2 Set the Ringer Melody for External Calls**

- Press **≡** and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "RING SETUP".
- Press **OK** and **△/▽** to select "EXT RING".
- Press **OK** and **△/▽** to select melody you want to hear for external calls.

**Note:**

The respective melody will be played while browsing the ringtone list.

- Press **OK** to confirm.

**10.3.3 Set the Ringer Volume**

- Press **≡** and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "RING SETUP".
- Press **OK** and **△/▽** to select "RING VOLUME".



- Press **OK** and **△/▽** to select the desired ringer volume (a total of 6 ringer volume levels including "VOLUME OFF").

### Note:

The respective ringer volume will be played during your selection. If "VOLUME OFF" is selected, the  icon will be displayed.

- Press **OK** to confirm.


### 10.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired.


**Key Tone** - a single beep is emitted when you press a key.

**Low Battery Tone** - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.


**Out of Range Tone** - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press  and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "TONE SETUP".
- Press **OK** and **△/▽** to select "KEY TONE" / "BATTERY TONE" / "OUT OF RANGE".
- Press **OK** and **△/▽** to turn on or off these tones.
- Press **OK** to confirm.

## 10.4 Set the handset language

- Press  and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "LANGUAGE".
- Press **OK** and **△/▽** to select the desired language.
- Press **OK** to confirm.

### 10.4.1 Rename the Handset

- Press  and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "RENAME HS".
- Press **OK** and change the name of your handset, using **↵/✕** to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
- Press **OK** to confirm.

### 10.4.2 Choose the Information to be displayed in idle

You can choose to display time or handset name in your idle screen.

- Press  and **△/▽** to select "HS SETTINGS".



- Press **OK** and **△/▽** to select "HS DISPLAY".
- Press **OK** and **△/▽** to select "HANDSET NAME" or "TIME".
- Press **OK** to confirm.

**Note:**

If TIME is selected, but no time has been set the display will show -----.

## 10.5 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press **≡** and **△/▽** to select "HS SETTINGS".
- Press **OK** and **△/▽** to select "AUTO ANSWER".
- Press **OK** and **△/▽** to turn on or off the auto answer feature.
- Press **OK** to confirm.

## 10.6 Base Settings

### 10.6.1 Set the base ringer melody

- Press **≡** and **△/▽** to select "BS SETTINGS".
- Press **OK** and **△/▽** to select "BS RINGER".
- Press **OK** and **△/▽** to select the desired melody you want from a choice of 5.
- Press **OK** to confirm.

**Note:**

The respective ringer melody will be played while browsing the melody list.

### 10.6.2 Set the ringer volume

- Press **≡** and **△/▽** to select "BS SETTINGS".
- Press **OK** and **△/▽** to select "RING VOLUME".
- Press **OK** and **△/▽** to select the desired ringer volume (a total of 6 ringer volume levels including "VOLUME OFF").
- Press **OK** to confirm.

**Note:**

The respective ringer volume will be played during your selection.








### 10.6.3 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and "REGISTER" on the display.








### **Note:**

You cannot de-register the handset that you are currently using.

- Press  and  to select "BS SETTINGS".
- Press  to show "DELETE HS".
- Press  and the display shows "PIN? -----".
- Enter the 4-digit system PIN (default 0000).
- Press  and the first handset number is displayed.
- Press  to scroll through the list of registered handsets and select the number of the handset you want to de-register.
- Press  to confirm, and the chosen handset will be de-registered.








### **10.6.4 Change the Flash (Recall) Time**

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are "SHORT" (the default value of 100ms), "MEDIUM" (300ms) or "LONG" (600ms).

- Press  and  to select "BS SETTINGS".
- Press  and  to select "FLASH TIME".
- Press  and  to select your desired flash time ("SHORT", "MEDIUM", "LONG", with the current setting indicated by an asterisk to the right).
- Press  to confirm.

### **10.6.5 Change the System PIN Code**

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorised use. The default system PIN code is "0000".

- Press  and  to select "BS SETTINGS".
- Press  and  to select "CHANGE PIN".
- Press  and the display shows "PIN?-----"
- Enter the old system PIN.
- Press  to display "NEW PIN?-----", and enter your new 4-digit system PIN.
- Press  to display "CONFIRM?-----", and enter your new 4-digit system PIN again.

**Note:**

If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

- Press **OK** to confirm




**10.7 Handset registration****Important:**


When you purchase your phone, all handsets are already registered to your base, so you do not need to register them.


Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

- Press and hold  on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press  and  to select "REGISTRATION".
- Press **OK** to display PIN?-----.
- Enter the 4-digit system PIN (default 0000).
- Press **OK** to confirm, and the display will show "SEARCHING".

If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

**10.8 Reset your phone**

You can reset your phone to the default settings. After a reset, all your personal settings, call list entries, redial list entries, and answering machine messages will be deleted but your phonebook remains unchanged:

- Press  and  to select "DEFAULT".
- Press **OK** to display "PIN?-----".

- Enter the 4-digit system "PIN" (default 0000).
- Press **OK** to display "CONFIRM?"
- Press **OK** to confirm, and the phone will be reset to its default settings.

## 11 ANSWERING MACHINE (Only for D205)

Your phone includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

If the answering machine memory is full, the Handset will display "TAM FULL" alternately with the handsets name or time, depending on the handset standby display mode set. You will have to delete some messages before any new ones can be recorded.







Some answering machine functions can be operated from the base, including playing messages and turning the answering machine on or off. The answering machine can also be controlled and set up using the handset menu functions, as below.

### 11.1 Turn on/off the answering machine

You can turn the answering machine on or off using the handset.

When the answering machine is set to "ON", calls will be answered after the set answer delay and the caller can then leave you a message.






When the answering machine is set to "OFF", calls will be answered after 14 rings and the answer only message will be played to your callers. They will not be able to leave you a message.

- Press  and  to select "ANS. MACHINE".
- Press **OK** and  to select "TAM ON/OFF".
- Press **OK** and  to select "ON" or "OFF".
- Press **OK** to confirm.
  - > If answering machine is set to "ON",  displays on the handset LCD.
  - > If answering machine is set to "OFF",  will not display on the handset LCD.

## 11.2 Listen to the messages in the answering machine

When new messages are recorded on the answering machine, the ★ flashes on the handset display until all the new messages are played. After a new message is played it will be saved as an old message automatically unless it is deleted.

Old messages will be played after all new messages are all played.

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "MSG PLAYBACK".
- Press  to start message playback through the earpiece and the screen displays the date and time information of the message received.





### Note:

A ★ is placed at the centre of the bottom of the handset display to indicate that it is a new message.

When a message has been played, the ★ will disappear and will not be shown when you listen to this message again.

### Note:

If there are no messages, the handset display will briefly show "00-00 00-00" then return to "MSG PLAYBACK".

- During message playback, press  or  to increase or decrease the message playback volume respectively.
- Press  and  to select "STOP", "FORWARD", "PREVIOUS", "DELETE" to perform the following functions during message playback.







STOP	Stop the current message playback and return to the ANS. MACHINE menu.
FORWARD	Skip to play the next message. The date and time information of the next message will display if there is another message.
PREVIOUS	Repeat playing the current message from the beginning. The date and time information of the current message will display.
DELETE	Delete the current message and the next message will be played.

**Note:**

Alternatively, you can use the following shortcut keys to control different operations during message playback.

- Press key 5 to stop message playback.
- Press key 4 once to skip to repeat playing the current message from the beginning. Press twice to skip backward to play the previous message.
- Press key 6 to skip to play next message.
- Press key 2 to delete the current message playback.

**11.3 Delete all messages in the answering machine**







- Press  and  to select "ANS. MACHINE".
- Press  and  to select "DELETE ALL".
- Press  to display "CONFIRM?".
- Press  to delete all old messages.

**Note:**


If there are no more messages in the answering machine, "EMPTY" will display and return back to "ANS. MACHINE" menu.

**11.4 Record Memo**

You can record a memo message for another user. When you record a memo, the message counter will increase by one and the message can be played back in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "MEMO".
- Press  to start memo recording and "RECORDING" is displayed.
- Press  to stop memo recording and save the memo.

**OR**

- Press  to stop memo recording without saving and return back to the "ANS. MACHINE" menu.










**11.5 Answering machine settings**

You can use the "TAM SETTINGS" menu through the handset to change the settings of your answering machine.

**11.5.1 Set the answer mode**

By default, the answer machine is set in "ANS & REC" mode which allows callers to leave a message. This mode can be changed to "ANSWER










ONLY" which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "ANSWER MODE".
- Press  and  to select "ANS & REC" or "ANSWER ONLY".
- Press  to confirm.

When your answering machine memory is full and it is in "ANS & RECORD", the answer mode will change to "ANSWER ONLY" automatically. It will return to "ANS & RECORD" mode automatically after some messages have been deleted.














### 11.5.2 Set the outgoing message (OGM) language.

The answering machine announces the outgoing message when it answers a call. There is a pre-set OGM for each of "ANS & RECORD" mode or "ANSWER ONLY" mode.

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "TAM LANGUAGE".
- Press  and  to select your desired OGM language.
- Press  to confirm.

### 11.5.3 Record Your Own Outgoing Message (OGM)

You can record your own OGM for ANS & REC mode or ANSWER ONLY mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalised OGM is deleted, the pre-set OGM will be restored automatically.












- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "OGM SETTINGS".
- Press  and  to select "ANS & RECORD" or "ANSWER ONLY".
- Press  and  to select "RECORD MESS".
- Press  to start recording your personalised OGM and "RECORDING" is displayed on the screen.
- Press  to stop and save your personalised OGM.  
 > Your newly saved OGM will playback automatically.
- Alternatively, press  to return to previous screen without saving the personalised OGM



### 11.5.4 Playback and Delete the Outgoing Message (OGM)

You can playback your own personalised OGM or the pre-set OGM for "ANS & REC" mode or "ANSWER ONLY" mode and choose to delete your personalised OGM during playback and record a new one whenever you want. Please note that pre-set OGM cannot be deleted.

 
#### 11.5.4.1 Playback the OGM

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "OGM SETTINGS".
- Press  and  to select "ANS & REC" or "ANSWER ONLY".
- Press  to show "PLAYBACK".
- Press  to playback your current OGM and "PLAYING OGM" is displayed on the screen.
- Press  to stop the OGM playback and return to the previous menu.

 
#### Note:

If a personalised OGM has not been recorded, the pre-set OGM will be played.

#### 11.5.4.2 Delete the Personalised OGM







- Repeat Steps 1 to 6 in Section 11.5.4.1.
- Press  while the OGM is playing to delete your personalised OGM and return to the previous menu and the pre-set OGM is restored automatically.

#### Note:

If the pre-set OGM is playing, you are not allowed to delete it, so pressing  will just stop the playback and return to the previous menu.

### 11.5.5 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or TIME SAVER. If Time Saver is set the answering machine will answer after 5 rings if there are no new messages, or after 2 rings if there is a new message, so if you call in and you don't get an answer after 3 or 4 rings, you can hang up and save on call charges.

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "ANSWER DELAY" (Available options: "2 RINGS", "4 RINGS", "6 RINGS", "8 RINGS" or "TIME SAVER").



- Press **OK** and **△/▽** to select your desired answer delay.
- Press **OK** to confirm.

### 11.5.6 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

- Press **☰** and **△/▽** to select "ANS. MACHINE".
- Press **OK** and **△/▽** to select "TAM SETTINGS".
- Press **OK** and **△/▽** to select "RECORD TIME" (Available options: "60S", "120S", "180S" or "UNLIMITED").
- Press **OK** and **△/▽** to select your desired recording time.
- Press **OK** to confirm.

### 11.5.7 Call screening

When the answering machine is on and takes a call, you can listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person. The call can be screened at the base and with any handset.

#### 11.5.7.1 Screening at the base

By default, answering machine calls are played automatically through the base speaker and the volume can be adjusted with the VOL + and VOL -keys on the base.

If you don't want the caller to be heard when leaving a message, the base screening can be turned off:



- Press **☰** and **△/▽** to select "ANS. MACHINE".
- Press **OK** and **△/▽** to select "TAM SETTINGS".
- Press **OK** and **△/▽** to select "BS SCREENING".
- Press **OK** and **△/▽** to select "OFF" or "ON". (The current setting will be indicated by a \*.)
- Press **OK** to confirm the setting.

#### 11.5.7.2 Screening with a handset

If the answering machine is set to ON, when there is an incoming message, the handset will display "SCREENING?"










- Press **☰** to start call screening. Any Handset can listen to who is leaving the message and decide whether to pick up the call or not.
- The handset will display "SCREENING".
- You can adjust the earpiece volume by pressing **△/▽**.

**OR**

- Press  to return to previous screen and you cannot hear the recording. At any time if you want to pick up the call, you can press  and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

### 11.5.8 Change the Compression Rate

Three different compression rates ("HIGH", "MEDIUM" and "LOW") are provided for you to select different quality levels of recording incoming message. The lower the compression rate, the higher the recording quality level attained, but the shorter the total recording time available. ("LOW" = 8 minutes, "MEDIUM" = 11 minutes, "HIGH" = 18 minutes approx).

- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "COMPRESSION".
- Press  and  to select your desired compression rate.
- Press  to confirm.










### 11.5.9 Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home and then dialling a 4-digit remote access PIN from a tone-dialling phone. The 4-digit remote access PIN code is used to prevent other people from unauthorised access of your answering machine.

#### Note:

Remote Access must be turned on if you want to be able to use this feature, see 11.5.9.2.

#### 11.5.9.1 Change the 4-Digit Remote Access PIN






- Press  and  to select "ANS. MACHINE".
- Press  and  to select "TAM SETTINGS".
- Press  and  to select "CHANGE PIN".
- Press  to show "PIN?----", then enter the Old PIN. (Default Remote Access PIN is 0000).
- Press  to show "NEW PIN?----", then enter your new 4-digit PIN.
- Press  to show "CONFIRM?----", then enter your new 4-digit PIN again.

**Note:**

If the new PIN entered in Step 6 is not the same as the new PIN entered in Step 5, you must enter the new system PIN at step 5 again.

- Press **OK** to reconfirm.

**11.5.9.2 Activate or Deactivate the Remote Access**

- Press  and  to select "ANS. MACHINE".
- Press **OK** and  to select "TAM SETTINGS".
- Press **OK** and  to select "REMOTE ACC".
- Press **OK** and  to select "ON" or "OFF" to turn the remote access on or off respectively.
- Press **OK** to confirm.

**11.5.9.3 Access Your Answering Machine Remotely**

You can ring your phone from another tone-dialling phone to switch the answering machine on or off, and/or listen to your messages remotely.

- Place a call from a tone-dialling phone to your phone.
- When the answering machine answers the call and starts playing the OGM, press the \* key. The OGM will stop playing
- Enter the 4-digit Remote Access PIN (default PIN is 0000). You will hear a single beep if the 4 digits are accepted, and then will need to press 5 to start playing any messages.

**Note:**

The \* may be entered during or after the OGM, and the 4-digit PIN should be follow without any delays.

**Note:**

If the 4-digit Remote Access PIN is not accepted, you will hear a multiple beep, and if it is entered incorrectly three times consecutively, the line will be released automatically.

- Press the following keys to carry out your desired function.


Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playing
4		Repeat playing the current message from the beginning. Press twice to skip backward to play the previous message
5	Play the message	Stop the current message playback
6		Skip to play the next message
7	Turn on the answering machine	
8		Stop the current message playback
9	Turn off the answering machine	

**Note:**

If your answering machine is switched off, the phone will enter into the remote access mode after 14 rings.

You can then enter the <\*> key and the 4-digit remote access PIN (Default Remote Access PIN is 0000) to activate the remote access feature.

## 12 TROUBLESHOOTING

Problem	Causes	Solutions
No dialling tone when pressing 	<ul style="list-style-type: none"> <li>• The connection cord of the base station is not plugged in.</li> <li>• The adapter cord is not plugged in correctly in the base station.</li> <li>• Another handset is using the base to make a call.</li> <li>• Wrong telephone line cord.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket.</li> <li>• Check the base station plug and the 230V plug (remove and plug-in).</li> <li>• Wait until the line is unoccupied.</li> <li>• Use the original telephone line cord supplied</li> </ul>
When connect to a PBX, no and/or wrong connection after dialling.	Dialling prefix is needed.	Insert the dialling prefix.
"SEARCHING" is displayed.	<ul style="list-style-type: none"> <li>• Base station out of range.</li> <li>• Base station not connected to mains.</li> </ul>	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong setting.	Check your Subscription with the network.
No Display	Empty Battery	Recharge Battery
<b>Answering Machine</b>		
The unit does not record new messages.	The answering machine is turned off.	Turn on the answering machine.

Problem	Causes	Solutions
The caller cannot leave a message.	<ul style="list-style-type: none"> <li>• The answering machine is turned off.</li> <li>• Message memory is full.</li> <li>• ANSWER ONLY mode is set.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn on the answering machine.</li> <li>• Erase unnecessary messages.</li> <li>• Change to ANS &amp; REC mode.</li> </ul>
I cannot operate the answering machine remotely.	<ul style="list-style-type: none"> <li>• You are entering the wrong remote access code.</li> <li>• You are pressing the dial keys too quickly.</li> <li>• You are using a pulse telephone.</li> </ul>	<ul style="list-style-type: none"> <li>• If you forget the remote access code, reset to the default settings.</li> <li>• Press each key firmly.</li> <li>• Try again using a touch tone phone.</li> </ul>
While recording an outgoing message or listening to messages, the unit rings and recording stops.	A call is being received.	Answer the incoming call and try again to record your outgoing message later.

Please contact the technical support of the network provider for further information.

This telephone is not equipped with a grounding function, and therefore some of the functions may be limited when used in PBX systems.

## 13 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

**Please keep your sales (till) receipt this is your proof of guarantee.**

### 13.1 While the unit is under Guarantee

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

### 13.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **www.aegtelephones.eu**

This product works with rechargeable batteries only. If you put nonrechargeable batteries in the handset and place it on the base, the handset will be damaged and this is NOT covered under the warranty conditions.

## 14 TECHNICAL DETAILS

<b>Standard</b>	Digital Enhanced Cordless Telecommunication (DECT)
<b>Frequency range</b>	1.88 to 1.9 GHz (bandwidth = 20 MHz)
<b>Channel bandwidth</b>	1.728 MHz
<b>Operating range</b>	Up to 300m outdoors; Up to 50m indoors
<b>Operating time</b>	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
<b>Temperature range</b>	Operating 0° C to 40° C, Storage -20° C to 60° C
<b>Electrical power</b>	Base unit: S004LB0600045 / S004LV0600045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Battery Information 2 x 1.2V AAA size 400mAh NiMH

Risk of explosion if battery is replaced by an incorrect type  
Dispose of used batteries according to the instructions.

## 15 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on: [www.aegtelephones.eu](http://www.aegtelephones.eu)





## 16 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

**Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.**

## 17 CLEANING AND CARE

**Do not clean** any part of your phone with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

**When necessary, clean it with a damp cloth.**

Keep your phone system away from **hot, humid conditions or strong sunlight**, and **don't let it get wet.**





© 2012 Binatone Electronics International Limited

All rights reserved

Subject to availability. Rights of modification reserved.

AEG is a registered trademark used under license from AB Electrolux (publ)

[www.aegtelephones.eu](http://www.aegtelephones.eu)

